


EURO

HVLP AIR SPRAY GUN
EURO 4200A SERIES

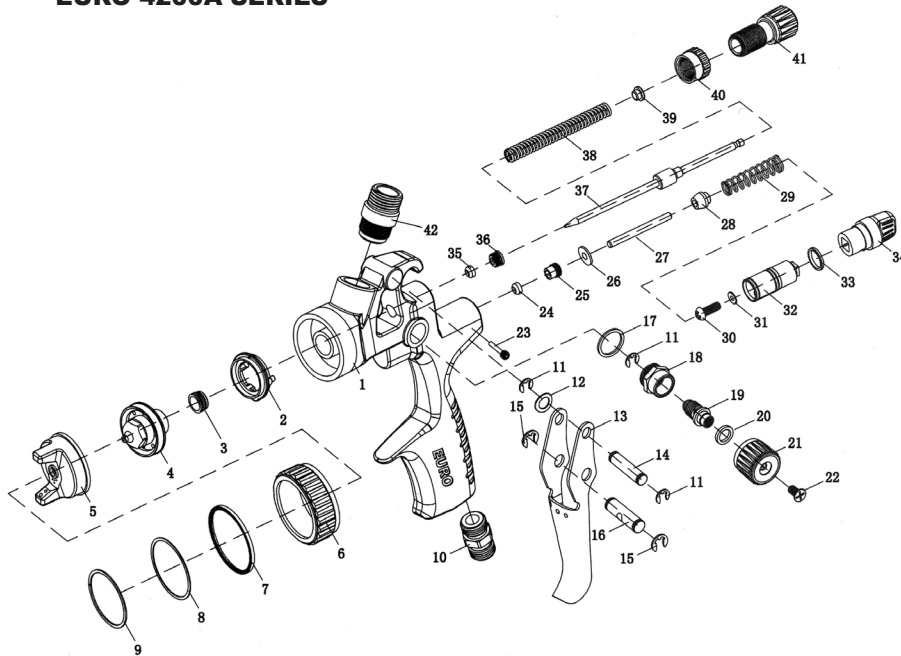

BREAKDOWN

No.	Description	No.	Description
1	Gun body	25	Sealing screw
2	Air separation ring	26	Air valve washer
3	Nozzle gasket	27	Valve rod
4	Nozzle	28	Valve seat
5	Air cap	29	Valve spring
6	Locking ring	30	pan head screws
7	Locking ring gasket	31	pan head screws washer
8	Washer for air cap	32	Air adjust adapter
9	Retainer	33	Gland seal
10	G1/4 (A) joint	34	Air adjust knob
11	Retainer 4	35	Needle packing gasket
12	Washer	36	Needle packing screw
13	Trigger	37	Needle
14	Trigger pin	38	Needle adjust spring
15	Retainer 5	39	Needle adjust adapter
16	Hinge pin	40	Needle adjust Nut
17	Gasket	41	Needle adjust knob
18	Spray pattern adjust adapter	42	Cup connector
19	Spray pattern adjust lever		
20	Washer		
21	Spray pattern adjust knob		
22	Cross head screw		
23	Fixed screw		
24	Air valve seat		